

Demand Controller тм External Relay Kit

The Enovative External Relay may be required in controlling larger pumps that do not come paired with the controller.

Wiring Instructions

Just like in the picture below, the neutral wire (white) connects through the relay box from the wall all the way to the pump. The hot wire (black) connects from the wall to one side of the relay, then the second hot wire will run from the pump to the other side of the relay.



入山たの日めた[®] 11823 Slauson Ave. Suite 30 Santa Fe Springs, CA 90670 | P: (866) 495-2734 <u>www.AutoHotUSA.com</u>